


Revised Thermocouple Reference Tables

TYPE T


Reference Tables
N.I.S.T.
Monograph 175
Revised to
ITS-90

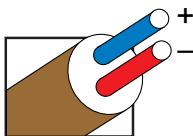

Thermocouple Grade

Copper
VS.
Copper-Nickel

Extension Grade

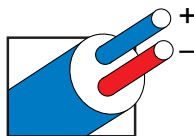

MAXIMUM TEMPERATURE RANGE
Thermocouple Grade
 - 328 to 662°F
 - 200 to 350°C
Extension Grade
 - 76 to 212°F
 - 60 to 100°C
LIMITS OF ERROR
 (whichever is greater)
Standard: 1.0°C or 0.75% Above 0°C
 1.0°C or 1.5% Below 0°C
Special: 0.5°C or 0.4%
COMMENTS, BARE WIRE ENVIRONMENT:
 Mild Oxidizing, Reducing Vacuum or Inert; Good
 Where Moisture Is Present; Low Temperature
 and Cryogenic Applications
TEMPERATURE IN DEGREES °C
REFERENCE JUNCTION AT 0°C

Thermoelectric Voltage in Millivolts

°C	-10	-9	-8	-7	-6	-5	-4	-3	-2	-1	0	°C	°C	0	1	2	3	4	5	6	7	8	9	10	°C
-260	-6.258	-6.256	-6.255	-6.253	-6.251	-6.248	-6.245	-6.242	-6.239	-6.236	-6.232	-260	50	2.036	2.079	2.122	2.165	2.208	2.251	2.294	2.338	2.381	2.425	2.468	50
-250	-6.232	-6.228	-6.223	-6.219	-6.214	-6.209	-6.204	-6.198	-6.193	-6.187	-6.180	-250	60	2.468	2.512	2.556	2.600	2.643	2.687	2.732	2.776	2.820	2.864	2.909	60
-240	-6.180	-6.174	-6.167	-6.160	-6.153	-6.146	-6.138	-6.130	-6.122	-6.114	-6.105	-240	70	2.909	2.953	2.998	3.043	3.087	3.132	3.177	3.222	3.267	3.312	3.358	70
-230	-6.105	-6.096	-6.087	-6.078	-6.068	-6.059	-6.049	-6.038	-6.028	-6.017	-6.007	-230	80	3.358	3.403	3.448	3.494	3.539	3.585	3.631	3.677	3.722	3.768	3.814	80
-220	-6.007	-5.996	-5.985	-5.973	-5.962	-5.950	-5.938	-5.926	-5.914	-5.901	-5.888	-220	90	3.814	3.860	3.907	3.953	3.999	4.046	4.092	4.138	4.185	4.232	4.279	90
-210	-5.888	-5.876	-5.863	-5.850	-5.836	-5.823	-5.809	-5.795	-5.782	-5.767	-5.753	-210	100	4.279	4.325	4.372	4.419	4.466	4.513	4.561	4.608	4.655	4.702	4.750	100
-200	-5.753	-5.739	-5.724	-5.710	-5.695	-5.680	-5.665	-5.650	-5.634	-5.619	-5.603	-200	110	4.750	4.798	4.845	4.893	4.941	4.988	5.036	5.084	5.132	5.180	5.228	110
-190	-5.603	-5.587	-5.571	-5.555	-5.539	-5.523	-5.506	-5.489	-5.473	-5.456	-5.439	-190	120	5.228	5.277	5.325	5.373	5.422	5.470	5.519	5.567	5.616	5.665	5.714	120
-180	-5.439	-5.421	-5.404	-5.387	-5.369	-5.351	-5.334	-5.316	-5.297	-5.279	-5.261	-180	130	5.714	5.763	5.812	5.861	5.910	5.959	6.008	6.057	6.107	6.156	6.206	130
-170	-5.261	-5.242	-5.224	-5.205	-5.186	-5.167	-5.148	-5.128	-5.109	-5.089	-5.070	-170	140	6.206	6.255	6.305	6.355	6.404	6.454	6.504	6.554	6.604	6.654	6.704	140
-160	-5.070	-5.050	-5.030	-5.010	-4.989	-4.969	-4.949	-4.928	-4.907	-4.886	-4.865	-160	150	6.704	6.754	6.805	6.855	6.905	6.956	7.006	7.057	7.107	7.158	7.209	150
-150	-4.865	-4.844	-4.823	-4.802	-4.780	-4.759	-4.737	-4.715	-4.693	-4.671	-4.648	-150	160	7.209	7.260	7.310	7.361	7.412	7.463	7.515	7.566	7.617	7.668	7.720	160
-140	-4.648	-4.626	-4.604	-4.581	-4.558	-4.535	-4.512	-4.489	-4.466	-4.443	-4.419	-140	170	7.720	7.771	7.823	7.874	7.926	7.977	8.029	8.081	8.133	8.185	8.237	170
-130	-4.419	-4.395	-4.372	-4.348	-4.324	-4.300	-4.275	-4.251	-4.226	-4.202	-4.177	-130	180	8.237	8.289	8.341	8.393	8.445	8.497	8.550	8.602	8.654	8.707	8.759	180
-120	-4.177	-4.152	-4.127	-4.102	-4.077	-4.052	-4.026	-4.000	-3.975	-3.949	-3.923	-120	190	8.759	8.812	8.865	8.917	8.970	9.023	9.076	9.129	9.182	9.235	9.288	190
-110	-3.923	-3.897	-3.871	-3.844	-3.818	-3.791	-3.765	-3.738	-3.711	-3.684	-3.657	-110	200	9.288	9.341	9.395	9.448	9.501	9.555	9.608	9.662	9.715	9.769	9.822	200
-100	-3.657	-3.629	-3.602	-3.574	-3.547	-3.519	-3.491	-3.463	-3.435	-3.407	-3.379	-100	210	9.822	9.876	9.930	9.984	10.038	10.092	10.146	10.200	10.254	10.308	10.362	210
-90	-3.379	-3.350	-3.322	-3.293	-3.264	-3.235	-3.206	-3.177	-3.148	-3.118	-3.089	-90	220	10.362	10.417	10.471	10.525	10.580	10.634	10.689	10.743	10.798	10.853	10.907	220
-80	-3.089	-3.059	-3.030	-3.000	-2.970	-2.940	-2.910	-2.879	-2.849	-2.818	-2.788	-80	230	10.907	10.962	11.017	11.072	11.127	11.182	11.237	11.292	11.347	11.403	11.458	230
-70	-2.788	-2.757	-2.726	-2.695	-2.664	-2.633	-2.602	-2.571	-2.539	-2.507	-2.476	-70	240	11.458	11.513	11.569	11.624	11.680	11.735	11.791	11.846	11.902	11.958	12.013	240
-60	-2.476	-2.444	-2.412	-2.380	-2.348	-2.316	-2.283	-2.251	-2.218	-2.186	-2.153	-60	250	12.013	12.069	12.125	12.181	12.237	12.293	12.349	12.405	12.461	12.518	12.574	250
-50	-2.153	-2.120	-2.087	-2.054	-2.021	-1.987	-1.954	-1.920	-1.887	-1.853	-1.819	-50	260	12.574	12.630	12.687	12.743	12.799	12.856	12.912	12.969	13.026	13.083	13.139	260
-40	-1.819	-1.785	-1.751	-1.717	-1.683	-1.648	-1.614	-1.579	-1.545	-1.510	-1.475	-40	270	13.139	13.196	13.253	13.310	13.366	13.423	13.480	13.537	13.595	13.652	13.709	270
-30	-1.475	-1.440	-1.405	-1.370	-1.335	-1.299	-1.264	-1.228	-1.192	-1.157	-1.121	-30	280	13.709	13.766	13.823	13.881	13.938	13.995	14.053	14.110	14.168	14.226	14.283	280
-20	-1.121	-1.085	-1.049	-1.013	-0.976	-0.940	-0.904	-0.867	-0.830	-0.794	-0.757	-20	290	14.283	14.341	14.399	14.456	14.514	14.572	14.630	14.688	14.746	14.804	14.862	290
-10	-0.757	-0.720	-0.683	-0.646	-0.608	-0.571	-0.534	-0.496	-0.459	-0.421	-0.383	-10	300	14.862	14.920	14.978	15.036	15.095	15.153	15.211	15.270	15.328	15.386	15.445	300
0	-0.383	-0.345	-0.307	-0.269	-0.231	-0.193	-0.154	-0.116	-0.077	-0.039	0.000	0	310	15.445	15.503	15.562	15.621	15.679	15.738	15.797	15.856	15.914	15.973	16.032	310
0	0.000	0.039	0.078	0.117	0.156	0.195	0.234	0.273	0.312	0.352	0.391	0	320	16.032	16.091	16.150	16.209	16.268	16.327	16.387	16.446	16.505	16.564	16.624	320
10	0.391	0.431	0.470	0.510	0.549	0.589	0.629	0.669	0.709	0.749	0.790	10	330	16.624	16.683	16.742	16.802	16.861	16.921	16.980	17.040	17.100	17.159	17.219	330
20	0.790	0.830	0.870	0.911	0.951	0.992	1.033	1.074	1.114	1.155	1.196	20	340	17.219	17.279	17.339	17.399	17.458	17.518	17.578	17.638	17.698	17.759	17.819	340
30	1.196	1.238	1.279	1.320	1.362	1.403	1.445	1.486	1.528	1.570	1.612	30	350	17.819	17.879	17.939	17.999	18.060	18.120	18.180	18.241	18.301	18.362	18.422	350
40	1.612	1.654	1.696	1.738	1.780	1.823	1.865	1.908	1.950	1.993	2.036	40	360	18.422	18.483	18.543	18.604	18.665	18.725	18.786	18.847	18.908	18.969	19.030	360
°C	0	1	2	3	4	5	6	7	8	9	10	°C	°C	0	1	2	3	4	5	6	7	8	9	10	°C

Jakar Electronics, spol. s r.o. | tel: +420 596 311 899 | fax: +420 596 311 114 | e-mail: kontakt@jakar.cz